



EN	Wired keyboard	User Manual
<p><b>WIND FZ088 PRO MECHANICAL KEYBOARD</b></p> <p>English 한국어 Português Español Deutsch Italiano Русский язык Արաբական France Україна Indonesia 中文</p>	<p>1.Stylish design, removable magnetic cover 2.Two-colour injection moulding process, durable and wear-resistant, not easy to lose colour; multi-colour options 3.Mechanical switch design, 60 million times key life, durable, excellent hand feeling 4.Support 6 keys and N keys anti-ghosting, Internet banking password entry is not affected 5.With intelligent sleep mode: the host enters sleep or standby mode, the backlight function is turned off, and the previous mode is restored after the host starts. 6.Rainbow light, optional single colour or mixed light 7.Keyboard humanized design, with Fn to increase a series of commonly used quick function keys. 8.With dual mode (game mode) and (office mode) can be switched at will according to personal needs</p>	<p><b>Specifications</b></p> <ul style="list-style-type: none"> <li>•Connection:USB</li> <li>•FN key multi-function</li> <li>•Number of keys:108 keys</li> <li>•Size: 442(L)×132(W)×49.7(H)±0.2mm</li> <li>•Weight: 870g</li> <li>•Key life times: 60 million</li> <li>•Rated voltage: DC 5V</li> <li>•Rated current: &lt;250mA</li> <li>•Operating system: WIN XP/7/8/10/MAC</li> </ul>

1

EN	Dual Mode																																																
<p>Long press the knob to switch the mode: Gaming mode (knob indicator LED is on),Office mode (knob indication LED is off)</p> <ul style="list-style-type: none"> <li>• Game mode</li> </ul> <ul style="list-style-type: none"> <li>• M1 key = game mode 1: WASDQEZX Shift+L Tab CrH-TBMVF Abl, number keys 1-6 on</li> <li>• M2 key = game mode 2: QWERDF number keys 1-6 B ESC ASMGFY Space H Tab on.</li> <li>• M3 key = game mode 3: WASDERQ number keys 1-4 Shift-CrH-Space Tab Enter ESC Home End PGUP INS DEL F1 on</li> <li>• Press the knob switch to 20 kinds of lighting effects</li> <li>• Backlight brightness ± control</li> </ul> <ul style="list-style-type: none"> <li>• Office mode</li> </ul> <ul style="list-style-type: none"> <li>• M1 key = multimedia function (previous song)</li> <li>• M2 key = multimedia function (play / pause)</li> <li>• M3 key = multimedia function (next song)</li> <li>• Press the knob switch = multimedia function (mute)</li> <li>• Volume ± control</li> </ul>	<p><b>Customised mode key recording storage</b></p> <p>In the game mode state</p> <ol style="list-style-type: none"> <li>1. Press the M1 key to enter the corresponding custom mode</li> <li>2. Press and hold the M2 key (the indicator light is flashing) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press the M2 key to store it after completing the setting.</li> <li>3. Press M3 to enter the corresponding custom mode.</li> <li>4. Press the M2 key to enter the corresponding custom mode.</li> <li>5. Press any key that needs to be on or off to the specified state, then press the M2 key to store it after completing the setting.</li> <li>6. Press M3 to enter the corresponding custom mode.</li> <li>7. Press and hold the M3 key (the indicator light blinks) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press M3 to store it after completing the setting.</li> <li>8. Press FN+ESC to clear the light recording and restore the factory default constant light mode.</li> </ol> <p><b>Shortcut description</b></p> <table border="1"> <thead> <tr> <th>Fn+</th> <th>F1</th> <th>F2</th> <th>F3</th> <th>F4</th> <th>F5</th> <th>F6</th> <th>F7</th> </tr> </thead> <tbody> <tr> <td>Shortcut functions</td> <td>Computer</td> <td>Search</td> <td>Calculator</td> <td>CD</td> <td>Prev Track</td> <td>Next Track</td> <td>Play/Pause</td> </tr> <tr> <td>Fn+</td> <td>F8</td> <td>F9</td> <td>F10</td> <td>F11</td> <td>F12</td> <td>WIN-L</td> <td>→</td> </tr> <tr> <td>Shortcut functions</td> <td>Stop</td> <td>Mute</td> <td>Volume-</td> <td>Volume+</td> <td>Lock/unlock</td> <td>Lock</td> <td>WIN+APP</td> </tr> <tr> <td>Fn+</td> <td>←</td> <td>PTSE</td> <td>SCRLK</td> <td>Speed+</td> <td>8 keys anti-ghosting</td> <td>N keys anti-ghosting</td> <td>Speed+</td> </tr> <tr> <td>Shortcut functions</td> <td>Speed+</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Fn+	F1	F2	F3	F4	F5	F6	F7	Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause	Fn+	F8	F9	F10	F11	F12	WIN-L	→	Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP	Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+	Shortcut functions	Speed+						
Fn+	F1	F2	F3	F4	F5	F6	F7																																										
Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause																																										
Fn+	F8	F9	F10	F11	F12	WIN-L	→																																										
Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP																																										
Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+																																										
Shortcut functions	Speed+																																																

2

EN	Customised mode key recording storage	User Manual																																																
<p>1. Press the M1 key to enter the corresponding custom mode</p> <p>2. Press and hold the M2 key (the indicator light is flashing) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press the M2 key to store it after completing the setting.</p> <p>3. Press M3 to enter the corresponding custom mode.</p> <p>4. Press the M2 key to enter the corresponding custom mode.</p> <p>5. Press any key that needs to be on or off to the specified state, then press the M2 key to store it after completing the setting.</p> <p>6. Press M3 to enter the corresponding custom mode.</p> <p>7. Press and hold the M3 key (the indicator light blinks) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press M3 to store it after completing the setting.</p> <p>8. Press FN+ESC to clear the light recording and restore the factory default constant light mode.</p>	<p><b>Shortcut description</b></p> <table border="1"> <thead> <tr> <th>Fn+</th> <th>F1</th> <th>F2</th> <th>F3</th> <th>F4</th> <th>F5</th> <th>F6</th> <th>F7</th> </tr> </thead> <tbody> <tr> <td>Shortcut functions</td> <td>Computer</td> <td>Search</td> <td>Calculator</td> <td>CD</td> <td>Prev Track</td> <td>Next Track</td> <td>Play/Pause</td> </tr> <tr> <td>Fn+</td> <td>F8</td> <td>F9</td> <td>F10</td> <td>F11</td> <td>F12</td> <td>WIN-L</td> <td>→</td> </tr> <tr> <td>Shortcut functions</td> <td>Stop</td> <td>Mute</td> <td>Volume-</td> <td>Volume+</td> <td>Lock/unlock</td> <td>Lock</td> <td>WIN+APP</td> </tr> <tr> <td>Fn+</td> <td>←</td> <td>PTSE</td> <td>SCRLK</td> <td>Speed+</td> <td>8 keys anti-ghosting</td> <td>N keys anti-ghosting</td> <td>Speed+</td> </tr> <tr> <td>Shortcut functions</td> <td>Speed+</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Fn+	F1	F2	F3	F4	F5	F6	F7	Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause	Fn+	F8	F9	F10	F11	F12	WIN-L	→	Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP	Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+	Shortcut functions	Speed+							<p><b>KR 키보드 카보드 사용자 매뉴얼</b></p> <p>1. 세련된 디자인, 털착자 자작 커버 2. 색상 성형 공정, 내마모성 및 내마모성, 색상 손실이 쉽지 않음, 다중 색상 혼선 3. 기계식 스위치 디자인 6 천만 회 기 수명, 내구성 우수한 손 느낌 4. 키 및 N 키 고스트 방지 지원, 인터넷뱅킹 비밀번호 입력은 영향을 받지 않습니다. 5. S/N비율 절전 모드 : 호스팅이 절전 또는 대기 모드로 들어가고 백라이트 기능이 깨지고 호스팅이 시작되면 이전 모드가 복원됩니다. 6. 무지개 조명, 단색 또는 혼합 조명(음악) 7. 키보드 디자인 험화, Fn을 사용하여 일반적으로 사용되는 일련의 빠른 기능 키를 놀립니다. 8. 듀얼 모드 (게임 모드) 및 (사무실 모드)로 개인의 필요에 따라 마음대로 전환 할 수 있습니다.</p>
Fn+	F1	F2	F3	F4	F5	F6	F7																																											
Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause																																											
Fn+	F8	F9	F10	F11	F12	WIN-L	→																																											
Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP																																											
Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+																																											
Shortcut functions	Speed+																																																	

3

EN	Customised mode key recording storage	User Manual																																																
<p>1. Press the M1 key to enter the corresponding custom mode</p> <p>2. Press and hold the M2 key (the indicator light is flashing) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press the M2 key to store it after completing the setting.</p> <p>3. Press M3 to enter the corresponding custom mode.</p> <p>4. Press the M2 key to enter the corresponding custom mode.</p> <p>5. Press any key that needs to be on or off to the specified state, then press the M2 key to store it after completing the setting.</p> <p>6. Press M3 to enter the corresponding custom mode.</p> <p>7. Press and hold the M3 key (the indicator light blinks) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press M3 to store it after completing the setting.</p> <p>8. Press FN+ESC to clear the light recording and restore the factory default constant light mode.</p>	<p><b>Shortcut description</b></p> <table border="1"> <thead> <tr> <th>Fn+</th> <th>F1</th> <th>F2</th> <th>F3</th> <th>F4</th> <th>F5</th> <th>F6</th> <th>F7</th> </tr> </thead> <tbody> <tr> <td>Shortcut functions</td> <td>Computer</td> <td>Search</td> <td>Calculator</td> <td>CD</td> <td>Prev Track</td> <td>Next Track</td> <td>Play/Pause</td> </tr> <tr> <td>Fn+</td> <td>F8</td> <td>F9</td> <td>F10</td> <td>F11</td> <td>F12</td> <td>WIN-L</td> <td>→</td> </tr> <tr> <td>Shortcut functions</td> <td>Stop</td> <td>Mute</td> <td>Volume-</td> <td>Volume+</td> <td>Lock/unlock</td> <td>Lock</td> <td>WIN+APP</td> </tr> <tr> <td>Fn+</td> <td>←</td> <td>PTSE</td> <td>SCRLK</td> <td>Speed+</td> <td>8 keys anti-ghosting</td> <td>N keys anti-ghosting</td> <td>Speed+</td> </tr> <tr> <td>Shortcut functions</td> <td>Speed+</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Fn+	F1	F2	F3	F4	F5	F6	F7	Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause	Fn+	F8	F9	F10	F11	F12	WIN-L	→	Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP	Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+	Shortcut functions	Speed+							<p><b>PT Berkabel teclado</b></p> <p>1.Desenho elegante, capa magnética extraível 2.Processo de moldagem por injeção de dois cores, durável e resistente ao desgaste, não fácil perder o color, opções multicolor 3.Desenho do interruptor mecânico, 60 milhões de vezes vida útil, durável, excelente sensação da mão 4.키 및 N 키 고스트 방지 지원, 인터넷뱅킹 비밀번호 입력은 영향을 받지 않습니다. 5. With intelligent sleep mode: the host enters sleep or standby mode, the backlight function is turned off, and the previous mode is restored after the host starts. 6. 무지개 조명, 단색 또는 혼합 조명(음악) 7. 키보드 디자인 험화, Fn을 사용하여 일반적으로 사용되는 일련의 빠른 기능 키를 놀립니다. 8. 듀얼 모드 (게임 모드) 및 (사무실 모드)로 개인의 필요에 따라 마음대로 전환 할 수 있습니다.</p>
Fn+	F1	F2	F3	F4	F5	F6	F7																																											
Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause																																											
Fn+	F8	F9	F10	F11	F12	WIN-L	→																																											
Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP																																											
Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+																																											
Shortcut functions	Speed+																																																	

4

EN	Customised mode key recording storage	User Manual																																																
<p>1. Press the M1 key to enter the corresponding custom mode</p> <p>2. Press and hold the M2 key (the indicator light is flashing) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press the M2 key to store it after completing the setting.</p> <p>3. Press M3 to enter the corresponding custom mode.</p> <p>4. Press the M2 key to enter the corresponding custom mode.</p> <p>5. Press any key that needs to be on or off to the specified state, then press the M2 key to store it after completing the setting.</p> <p>6. Press M3 to enter the corresponding custom mode.</p> <p>7. Press and hold the M3 key (the indicator light blinks) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press M3 to store it after completing the setting.</p> <p>8. Press FN+ESC to clear the light recording and restore the factory default constant light mode.</p>	<p><b>Shortcut description</b></p> <table border="1"> <thead> <tr> <th>Fn+</th> <th>F1</th> <th>F2</th> <th>F3</th> <th>F4</th> <th>F5</th> <th>F6</th> <th>F7</th> </tr> </thead> <tbody> <tr> <td>Shortcut functions</td> <td>Computer</td> <td>Search</td> <td>Calculator</td> <td>CD</td> <td>Prev Track</td> <td>Next Track</td> <td>Play/Pause</td> </tr> <tr> <td>Fn+</td> <td>F8</td> <td>F9</td> <td>F10</td> <td>F11</td> <td>F12</td> <td>WIN-L</td> <td>→</td> </tr> <tr> <td>Shortcut functions</td> <td>Stop</td> <td>Mute</td> <td>Volume-</td> <td>Volume+</td> <td>Lock/unlock</td> <td>Lock</td> <td>WIN+APP</td> </tr> <tr> <td>Fn+</td> <td>←</td> <td>PTSE</td> <td>SCRLK</td> <td>Speed+</td> <td>8 keys anti-ghosting</td> <td>N keys anti-ghosting</td> <td>Speed+</td> </tr> <tr> <td>Shortcut functions</td> <td>Speed+</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Fn+	F1	F2	F3	F4	F5	F6	F7	Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause	Fn+	F8	F9	F10	F11	F12	WIN-L	→	Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP	Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+	Shortcut functions	Speed+							<p><b>ES Teclado berkabel</b></p> <p>1. Diseño elegante, cubierta magnética extraíble 2. Proceso de moldaje por inyección de dos colores, duradero y resistente al desgaste, no fácil perder el color, opciones multicolor 3. Diseño del interruptor mecánico, 60 millones de veces vida útil, duradero, excelente sensación de la mano 4. Soporta 6 teclas y N teclas anti-fogamento, la entrada de contraseña de banca por Internet no se afecta 5. Con el modo de suspensión inteligente: el host entra en modo de suspensión o espera, la función de retroiluminación es desactivada, y el modo anterior es restaurado después de que el host se inicia. 6. Luz arco-iris, opción de un solo color o luz mixta 7. Keyboard diseño humanizado, con Fn para aumentar una serie de teclas de función rápida comúnmente utilizadas. 8. Con modo doble (modo de juego) y (modo de oficina) se pueden cambiar a voluntad de acuerdo con las necesidades personales</p>
Fn+	F1	F2	F3	F4	F5	F6	F7																																											
Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause																																											
Fn+	F8	F9	F10	F11	F12	WIN-L	→																																											
Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP																																											
Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+																																											
Shortcut functions	Speed+																																																	

5

EN	Customised mode key recording storage	User Manual																																																
<p>1. Press the M1 key to enter the corresponding custom mode</p> <p>2. Press and hold the M2 key (the indicator light is flashing) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press the M2 key to store it after completing the setting.</p> <p>3. Press M3 to enter the corresponding custom mode.</p> <p>4. Press the M2 key to enter the corresponding custom mode.</p> <p>5. Press any key that needs to be on or off to the specified state, then press the M2 key to store it after completing the setting.</p> <p>6. Press M3 to enter the corresponding custom mode.</p> <p>7. Press and hold the M3 key (the indicator light blinks) to enter the customised spot colour recording state. Press any key that needs to be on or off to the specified state, and then press M3 to store it after completing the setting.</p> <p>8. Press FN+ESC to clear the light recording and restore the factory default constant light mode.</p>	<p><b>Shortcut description</b></p> <table border="1"> <thead> <tr> <th>Fn+</th> <th>F1</th> <th>F2</th> <th>F3</th> <th>F4</th> <th>F5</th> <th>F6</th> <th>F7</th> </tr> </thead> <tbody> <tr> <td>Shortcut functions</td> <td>Computer</td> <td>Search</td> <td>Calculator</td> <td>CD</td> <td>Prev Track</td> <td>Next Track</td> <td>Play/Pause</td> </tr> <tr> <td>Fn+</td> <td>F8</td> <td>F9</td> <td>F10</td> <td>F11</td> <td>F12</td> <td>WIN-L</td> <td>→</td> </tr> <tr> <td>Shortcut functions</td> <td>Stop</td> <td>Mute</td> <td>Volume-</td> <td>Volume+</td> <td>Lock/unlock</td> <td>Lock</td> <td>WIN+APP</td> </tr> <tr> <td>Fn+</td> <td>←</td> <td>PTSE</td> <td>SCRLK</td> <td>Speed+</td> <td>8 keys anti-ghosting</td> <td>N keys anti-ghosting</td> <td>Speed+</td> </tr> <tr> <td>Shortcut functions</td> <td>Speed+</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Fn+	F1	F2	F3	F4	F5	F6	F7	Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause	Fn+	F8	F9	F10	F11	F12	WIN-L	→	Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP	Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+	Shortcut functions	Speed+							<p><b>KR 키보드 카보드 사용자 매뉴얼</b></p> <p>1. 세련된 디자인, 털착자 자작 커버 2. 색상 성형 공정, 내마모성 및 내마모성, 색상 손실이 쉽지 않음, 다중 색상 혼선 3. 기계식 스위치 디자인 6 천만 회 기 수명, 내구성 우수한 손 느낌 4. 키 및 N 키 고스트 방지 지원, 인터넷뱅킹 비밀번호 입력은 영향을 받지 않습니다. 5. S/N비율 절전 모드 : 호스팅이 절전 또는 대기 모드로 들어가고 백라이트 기능이 깨지고 호스팅이 시작되면 이전 모드가 복원됩니다. 6. 무지개 조명, 단색 또는 혼합 조명(음악) 7. 키보드 디자인 험화, Fn을 사용하여 일반적으로 사용되는 일련의 빠른 기능 키를 놀립니다. 8. 듀얼 모드 (게임 모드) 및 (사무실 모드)로 개인의 필요에 따라 마음대로 전환 할 수 있습니다.</p>
Fn+	F1	F2	F3	F4	F5	F6	F7																																											
Shortcut functions	Computer	Search	Calculator	CD	Prev Track	Next Track	Play/Pause																																											
Fn+	F8	F9	F10	F11	F12	WIN-L	→																																											
Shortcut functions	Stop	Mute	Volume-	Volume+	Lock/unlock	Lock	WIN+APP																																											
Fn+	←	PTSE	SCRLK	Speed+	8 keys anti-ghosting	N keys anti-ghosting	Speed+																																											
Shortcut functions	Speed+																																																	

6

DE	Tastatur Berkabel	Benutzerhandbuch
<p>1.stilvolles Design, abnehmbare magnetische Abdeckung 2.zweifarbiges Spritzwasserfertigen, langlebig und verschleißfest, nicht leicht zu verlieren Farbe, mehrfarbige Optionen 3.mechanischer Schalterdesign, 60 Millionen Mal Tastenlebensdauer, langlebig, ausgezeichnetes Handgefühl 4.Tasten und N-Tasten Anti-Ghosting, Internet-Banking-Passwort-Eingabe ist nicht betroffen 5.mit intelligentem Schlaflmodus: der Host geht in den Schlaf- oder Standby-Modus, die Hintergrundbeleuchtung wird ausgeschaltet, und der vorherige Modus wird nach dem Start des Hosts wiederhergestellt. 6.regenbogenfarbiges Licht optional einfarbiges oder gemischtes Licht 7.humanisiertes Design der Tastatur, mit Fn, um eine Reihe von häufig verwendeten Schnellfunktionsstäben zu erhöhen. 8.mit Dual-Modus (Spield-Modus) und (Büro-Modus) kann nach Belieben je nach persönlichen Bedürfnissen umgeschaltet werden</p>	<p><b>Spezifikationen</b></p> <ul style="list-style-type: none"> <li>•Anschluss:USB</li> <li>•Mehrere Funktionen FN</li> <li>•Anzahl der Tasten:108 Tasten</li> <li>•Größe: 442(L)×132(W)×49.7(H)±0.2mm</li> <li>•Gewicht: 870g</li> <li>•Lebensdauer der Tasten: 60 Millionen</li> <li>•Nennspannung: DC 5V</li> <li>•Nennstrom: &lt;250mA</li> <li>•Betriebssystem: WIN XP/7/8/10/MAC</li> </ul>	<p><b>RU Клавиатура</b></p> <p>1.Design elegante, copertura magnetica rimovibile 2.Processo di stampaggio a iniezione a due colori, durevole e resistente all'usura, non facile a perdere colore, opzioni multicolore 3.Design meccanico dell'interruttore, 60 milioni di volte di durata dei tasti, durevole, eccellente sensazione della mano 4.6 tasti e N tasti anti-ghosting, l'entrata della password di Internet banking non è influenzata 5.con modalità sleep intelligente: l'host entra in modalità sleep o standby, la funzione di retroilluminazione viene spenta e la modalità precedente viene ripristinata dopo il ristartaggio del host. 6.luce arcobaleno, colore singolo opzionale o luce mista 7.tastiera dal design umanizzato, con Fn per aumentare una serie di tasti funzione rapidi comuniamente utilizzati. 8.con doppia modalità (modalità gioco) e (modalità ufficio) può essere commutata a piacimento in base alle esigenze personali.</p>

7

IT	Tastiera berkabel	Manuale d'uso
<p>1.Design elegante, copertura magnetica rimovibile 2.Processo di stampaggio a iniezione a due colori, durevole e resistente all'usura, non facile a perdere colore, opzioni multicolore 3.Design meccanico dell'interruttore, 60 milioni di volte di durata dei tasti, durevole, eccellente sensazione della mano 4.6 tasti e N tasti anti-ghosting, l'entrata della password di Internet banking non è influenzata 5.con modalità sleep intelligente: l'host entra in modalità sleep o standby, la funzione di retroilluminazione viene spenta e la modalità precedente viene ripristinata dopo il</p>		