





## Key Layout Diagram :

Congratulations on becoming  
a Honorable LEOBOG  
**Hi75C PRO** user!

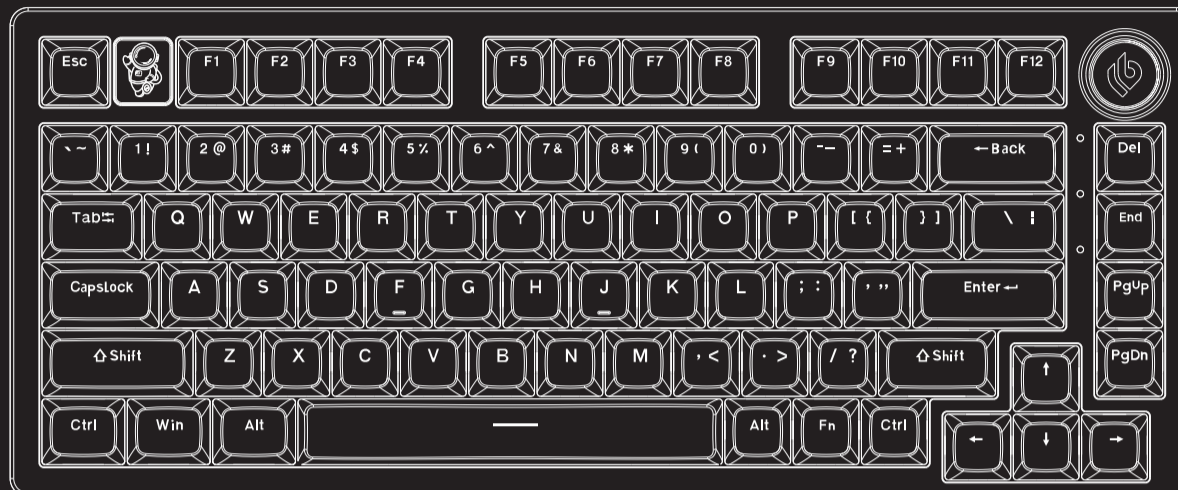

正面

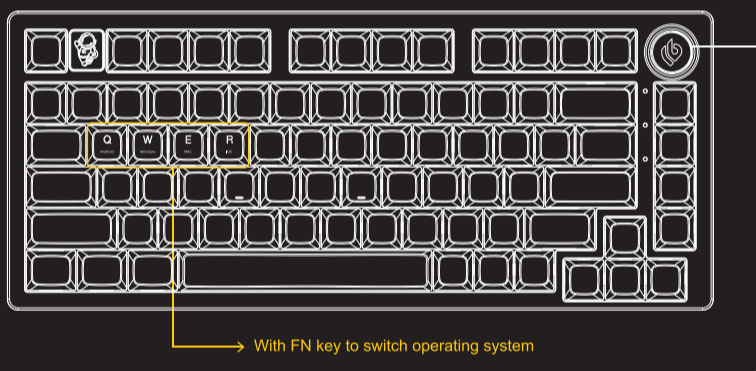

Long press the mode button to switch modes

	Gaming mode	Office mode
Indicator light	Breathing	Constant brightness
Short press	Cycle through 17 light effects	Mute
Knob clockwise	Light Brightness Plus	Volume Up
Knob counterclockwise	Lighting Brightness Decrease	Volume Down

Mode button  
 Gaming mode  
 Office mode



### Wired Connection

Plug the USB into the corresponding port

### 2.4G Connection

Switch to 2.4G mode, '~ key cyan light blinks slowly, then long press 3 seconds FN+'~ key cyan light blinks quickly to enter the code pairing state, at this time, plug in the receiver to complete the code pairing, '~ key cyan light is on for 2s, 2.4G connection is successful. \*Note: When connecting 2.4G, search first before inserting the receiver. The factory default has been pairing code.

### BT Connection

Switch toggle to BT mode BLE5.0/BLE3.0 (device call Hi75C PRO 5.0 KB/Hi75C PRO 3.0KB) Random broadcast according to the BT version of the device on the warp end, can connect 3 devices:

**FN+E=BT1** Blue indication under the button Blue light flashes fast when the channel is broadcasting, back to connect/connect blue light up for 3s.

**FN+R=BT2** Blue indication under the button Blue light flashes fast when the channel is broadcasting, back to connect/connect on blue light 3s.

**FN+T=BT3** Blue indication under the button Blue light flashes fast when the channel is broadcasting, back to connect/connect on blue light up for 3s.

反面

Hi75C PRO 专用说明卡  
尺寸: 280x110mm  
材质: 159g铜版纸过哑膜